

1561 Door Release Installation Instructions

SARGENT

ASSA ABLOY

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 / www.sargentlock.com

ASSA ABLOY, the global leader
in door opening solutions

1 INSTRUCTIONS:

- To locate junction box use table below.
- Determine door width (Dim. "B"). Measure pivot centerline to wall (Dim. "A"). Find dimension "C" in table.


Example: Pivot centerline to wall ("A") = 10"
Door Width ("B") = 36"
Junction Box Centerline ("C") = 33"

- If "A" or "B" falls between the numbers listed in table allow for difference.

Example: Pivot centerline to wall ("A") = 7"
Door Width ("B") = 36"
Junction Box Centerline ("C") = 33-5/8"


- If dimensions "A" and "B" intersect in shaded area of table **do not install junction box**. The degree of door opening will not permit proper alignment between armature and wall magnet.
- Vertical location determined by others suggested height not over 6'-0"
- Check degree of door opening in table and coordinate with door closers and other door hardware.

"A" – Pivot Centerline to Wall
"B" – Door Width
"C" – Pivot Centerline to Junction Box Centerline

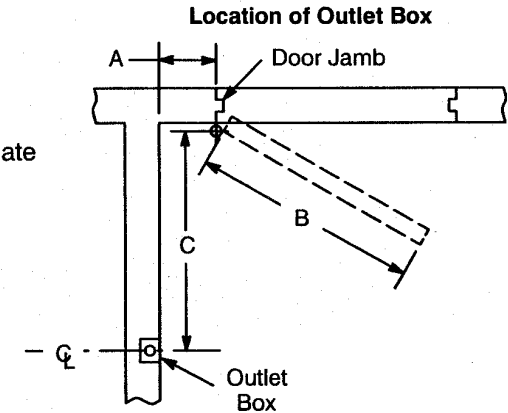

	Door Width "B"																					
Dim. "A"	28		30		32		34		36		38		40		42		44		46		48	
	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.	"C"	Deg.
2	26	92°	28	92°	29-7/8	92°	32	93°	34-1/8	93°	36	92°	37-7/8	92°	40	93°	42	93°	43-7/8	92°	45-5/8	92°
4	26	97°	28	96°	29-7/8	96°	32	95°	34-1/8	95°	36	95°	37-7/8	95°	40	95°	42	95°	43-7/8	94°	45-5/8	94°
6	25-5/8	102°	27-5/8	101°	29-5/8	101°	31-3/4	99°	33-3/4	98°	35-3/4	97°	37-3/4	97°	39-7/8	97°	41-7/8	97°	43-3/4	97°	45-1/2	97°
8	25-1/8	106°	27-1/4	105°	29-1/4	104°	31-3/8	103°	33-1/2	102°	35-1/2	101°	37-3/8	101°	39-1/2	101°	41-1/2	101°	43-3/8	100°	45-1/4	99°
10							31	105°	33	106°	35	105°	37	104°	39-1/8	104°	41-1/8	104°	43-1/8	103°	45	102°
12																			42-5/8	105°	44-1/2	104°

All dimensions given in inches.

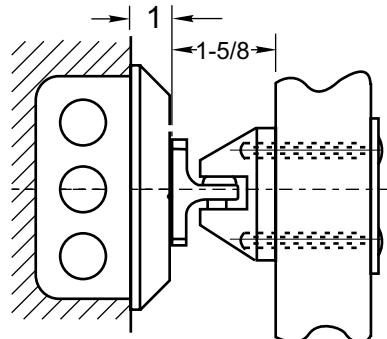


- All junction box anchoring shall withstand 50 pounds of pull or push force.
- Verify line voltage.
- See Page 2 to complete this installation

Copyright © 2013, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.


A7597:A 10-15-13

① See Page 1 for junction box location

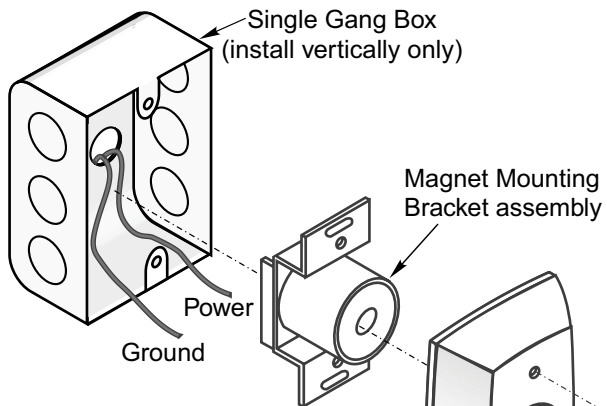

②

Connect power

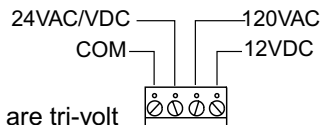


- For coils that are tri-volt put Ground wire in "Com". Put power wire in correct voltage slot on strip.
- For coils with two wires attach one wire to ground. Attach one wire to power. Coil is non-polarized so it doesn't matter which wire is attached to which.

④ Loosen Contact Plate Adjustment Screw

⑤

Remove Paper

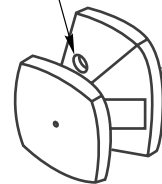


1/4-20 x 1/2"
FHMS

③

Attach Cover & magnet mounting bracket assembly to junction box

⑥ Turn Power On

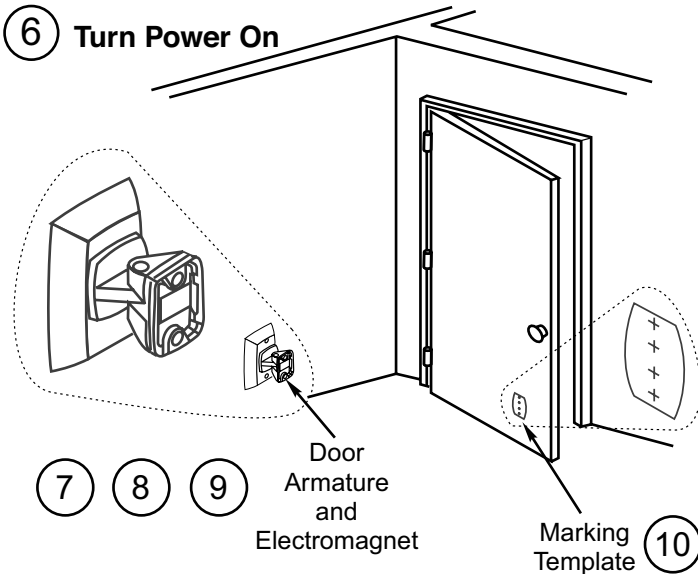

⑦

Place armature flat on coil. Make sure round solenoid is completely covered by contact plate.

** If coil cannot be energized yet, hand hold contact plate on magnet and complete next steps.

⑧

Open door against armature on wall.


⑨

Tighten contact plate on armature.

⑩


Pull door away leaving mounting template sticking to face of door.

CAUTION: Nicks and scratches on the metal ring of the coil will lessen or diminish the holding force of the magnet. Do not remove protective cap until last steps of installation.

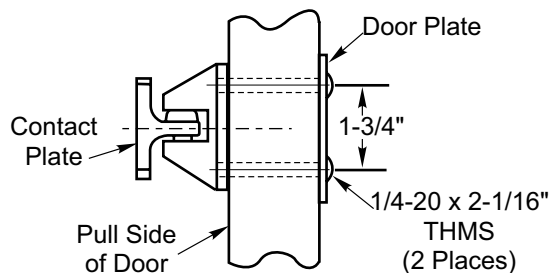

THRU BOLT

Hollow Metal, Hollow Core Wood or Composite Doors

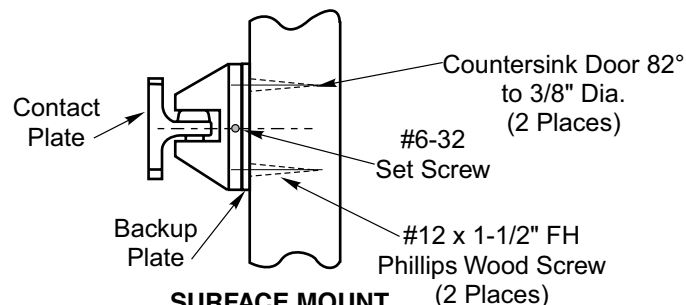

SURFACE MOUNT

Solid Wood Doors

⑫ Affix to door.

⑪

Select throbolt or surface mounting option.

SARGENT
ASSA ABLOY

ASSA ABLOY, the global leader
in door opening solutions