




INSTALLATION INSTRUCTIONS FOR TRIM OF PANIC EXIT DEVICE WHEN YOUR DOOR HAS CYLINDRICAL LOCK CUT-OUT

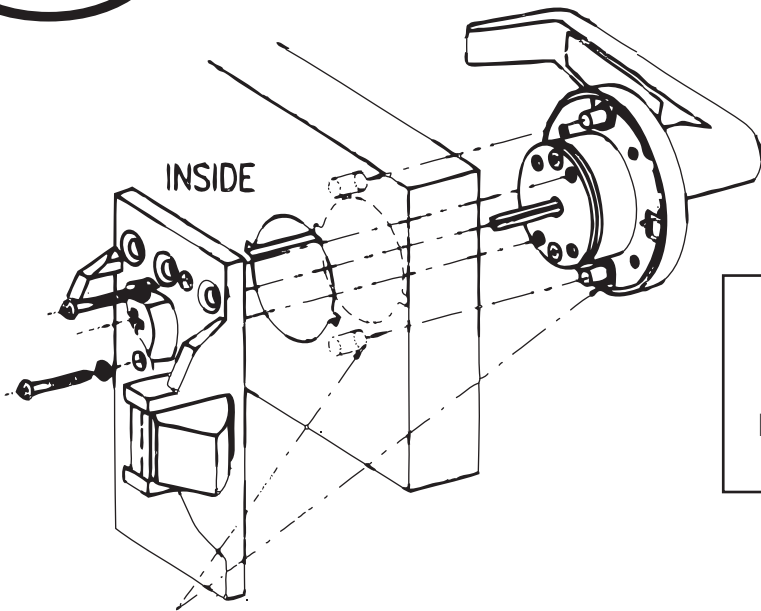

ENT00L STR05L
PAS30L DUM40L

CAUTION

ALWAYS USE PROVIDED SPRING WASHERS TO PREVENT SCREWS FROM COMING LOOSE. WARRANTY VOIDED FOR NON-COMPLIANCE.

IMPORTANT !

1) ALIGNMENT STUDS MUST ENTER INTO (2) 5/16" FIELD-DRILLED HOLES ON OUTSIDE OF DOOR (EXISTING SLOTS CAN BE ELONGATED WITH A FILE)

2) MAKE SURE TO TURN CAM COUNTER CLOCKWISE BY PHILLIPS DRIVER HOLDING TUBE WITH FINGERS AS FAR AS IT WILL GO BEFORE RE-ASSEMBLING OF HANDLE TO PREVENT MIS-POSITIONING OF CAM. (SEE FIG. 1 AND FIG. 2)

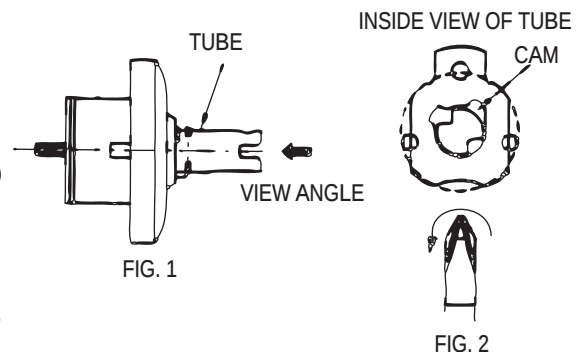


FIG. 1

FIG. 2

TEMPLATE

